Digital Audio Bible
USER MANUAL

Digital Audio Bible
USER MANUAL

GoBible
VOYAGER

Please carefully read this manual before operating this unit

CAUTION

1. Before using the device for the first time, you must charge the battery.You can charge the device with the provided adapter and USB cable.
   Please read 3.1.3 in user's manual to know how to charge the battery.
2. Please do not take the battery out from the GoBible Voyager after use.

1.Summary

This device contains the entire audio version of the Bible, both the Old and New Testaments, totally over 70 hours of audio and text. Please carefully read the instructions below, which explain how to use the **GoBible® Voyager**™ and all its features.

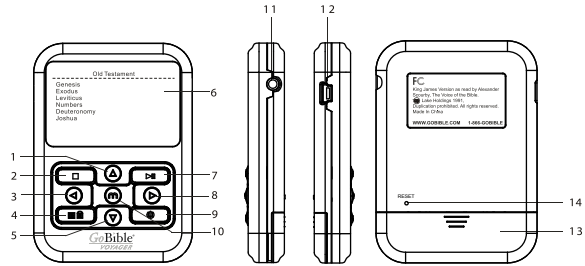

Front View | Side View | Rear View

1	Volume + / Scroll Up	8	Next
2	Stop	9	Power
3	Back	10	Mode
4	Button lock / Bookmark	11	Earphone jack
5	Volume - / Scroll Down	12	USB slot
6	LCD Display	13	Battery
7	Play/pause	14	Reset

CAUTION

1. Before using the device for the first time, you must charge the battery.You can charge the device with the provided adapter and USB cable.
   Please read 3.1.3 in user's manual to know how to charge the battery.
2. Please do not take the battery out from the GoBible Voyager after use.

2. Definition of Buttons

2.1 Power button:

2.1.1 Push power button 3 seconds to turn on the Voyager.

2.1.2 Push power button 5 seconds to turn off the Voyager.

2.2 Stop button

2.2.1 While playing audio or while the audio is paused, press the stop button to return to the menu where you selected play from.

2.3 Play/pause button

2.3.1 Under play status, push play/pause button to pause. Under pause status, push play/pause to play. While in the menu, press the play/pause button either once or twice to begin play.

2.4 MODE Button:

2.4.1 Under Stop, Play and Pause status: Press and hold the **MODE** button for two seconds to go to the Main Menu.
Please note: If the Voice Menu is off you may listen to the audio while you search through the menus. If the Voice menu is on, once you go back to main menu, the audio will stop playing and the voice menu will guide you through the menu structure. Please reference 3.3.3.5 for more information about Voice Menu.

2.4.2 Under Browse status: Press **MODE** key to select the menu.

2.5 Back button

2.5.1 Under Stop, Pause and Play status: Press the **Back** button to move back to the previous verse.

2.5.2 Under Browse status: Press **Back** button to return to the previous menu. If you entered the menu to browse for the first time after the player is powered on, press **Back** button to go back to the Main Menu. If you entered the menu to browse while audio is playing, press **Back** to return to the playing screen (unless you activated the Bible Voice Menu feature).

2.6 NEXT Button

2.6.1 Under Stop, Pause and Play status: Press **NEXT** button to move forward to the next verse.

6. For further Customer Service questions, please E-mial information@gobible.com

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that of the receiver

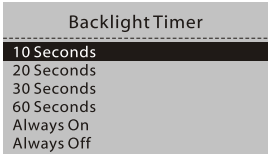

3.4 Power Off

3.4.1 Press the button "**POWER**" for five seconds to turn off the machine.

3.4.2 The device will power off automatically if there is no operation for 5 minutes under menu mode or pause.

3.4. 3 When Voice Menu on, you can scroll down the cursor to Power Off, then after the Voice played, you can press the **MODE** button then the device will be switched off.

4. Attention

4.1 Please remove the battery if you will not use the **Go Bible® Voyager™** for an extended period of time.

4.2 The user must peel off the green battery cover before using the battery in the device.

5. Please register your device with GoBible at http://gobible.com/device-registration.html

2.7 VOLUME + / Scroll Up

2.7.1 Under Stop, Pause and Play status: Press **VOLUME+ / Scroll Up** button to increase volume.

2.7.2 Under Browse status Use this button to scroll up the various menus. To browse up through menus rapidly press and hold down VOLUME+ /Scroll Up button

2.8 VOLUME -/ Scroll Down

2.8.1 Under Stop, Pause and Play status: Press **VOLUME -/ Scroll Down** button to decrease volume.

Note: While the Bible text feature is active, you may adjust the volume but in order to see the volume icon, you must first pause the audio.

2.8.2 Under Browse status: Use this button to scroll down the various menus. To browse down through menus rapidly, press and hold down **VOLUME -/ Scroll Down** button.

2.9 Button Lock / Bookmark

2.9.1 Under Play status: Press and release quickly the **Button Lock / Bookmark** button to create a bookmark for the current verse. The user will see an "**M**" appear on the screen to denote the verse has been successfully bookmarked.

2.9.2 Press **Button Lock / Bookmark** button for two seconds to lock the keyboard. The user will see a lock icon appear on the screen to denote the keyboard has been successfully locked. To unlock the keyboard, press and hold down the **Button Lock / Bookmark** button for two seconds until the lock icon disappears.

2.9.3 In order to delete a bookmark, the user should go to where their bookmarks are listed, highlight the desired bookmark to delete, press and release the **Button Lock / Bookmark** button to delete the bookmark.

2.10 Reset Button.

2.10.1 If the Voyager does not function as expected, try to Reset the Voyager by pressing the **Reset** button with a small pin or clip, then press the **Power** button to turn on the Voyager.The content and stored on **Voyager** are not affected by resetting, and no information is erased.

3. Operation and Function

3.1 Installation of battery

3.1.1 The player operates on one li-ion battery.

3.1.2 On the screen, there is a four level indicator, which shows approximate remaining battery **power**.

3.1.3 You have 2 ways to charge your GoBible:

3.1.3.1 Charging by wall adaptor, please have the mini USB side of USB Cable connected to the GoBible, and the other side connect to the Adaptor then you can charge you GoBible; Pictures:

3.1.3.2 Charging via PC, please have the mini USB side of USB Cable connected to the GoBible, and the other side connect to your PC, when PC is powered on, you can charge you GoBible.
Pictures:



3.1.3.3 The picture below will show up on the screen when the GoBible is Charging

You can not use the Voyager while it is charging.

CAUTION

1. Before using the device for the first time, you must charge the battery.You can charge the device with the provided adapter and USB cable. Please read 3.1.3 in user's manual to know how to charge the battery.
2. Please do not take the battery out from the GoBible Voyager after use.

3.3.4.4 Deleting a Favorite

After entering the Favorites menu, select the desired favorite item to delete and press and release **Button Lock / Bookmark** button.

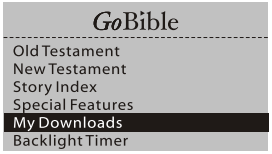

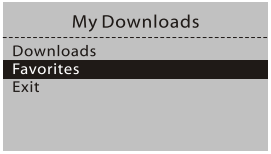

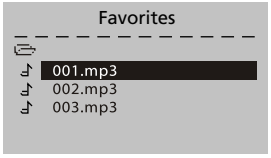

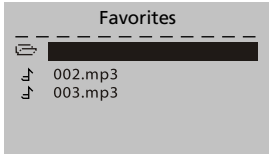

3.3.5 Backlight Timer

The user may adjust the time when the backlight timer stays illuminated. After selecting "Backlight" Timer from the Main Menu, a screen will come up which will show what the current Backlight Timer is set for. Please note that the default setting is 30 seconds. Press the **MODE** button from this screen and you will be taken to a screen that will allow several choices as to the duration of backlight illuminations. Move the cursor to the desired selection and press the **MODE** button. The device will go back to previous menu automatically and the new backlight time will be displayed. To return to the Main Menu from that screen, press the **BACK** button.

3.3.4.3 Play Favorites

From the Main Menu the user must select "**My Downloads**" by pressing the **MODE** button and then selecting "**Favorites**" by pressing the **MODE** button again. A list of the user's current favorites will appear.

Note: The **GoBible® Voyager™** can support 99 favorite items of music or other MP3. To listen, the user should move the cursor to the favorite they want to play and press the **PLAY/PAUSE** button twice. The device will begin play from that favorite item and it will play continuously to the end of the favorites list unless the user pauses or stops play.

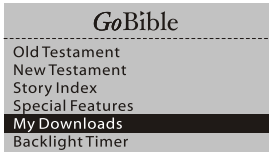

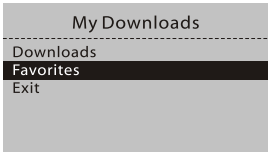

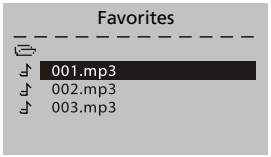

3.2 Power On

3.2.1 Press and hold down the **POWER** button for approximately three seconds to make the player power on. The screen will illuminate with the one message of below.

3.2.2 From this startup screen, the device will automatically take you to the Main Menu within a few seconds.

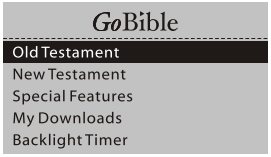

3.3 Operation

3.3.1 Play Old Testament and New Testament

This is for the user who knows exactly where in the audio they want to go. The **GoBible® Voyager™** is indexed to every verse in the Bible and there are several ways to enter the audio. The first selection this user must make is on the Main Menu screen where they must choose between the Old and New Testament. Once that choice has been made by pressing the **MODE** button, a list of books for that Testament will appear on the screen.

3.3.1.1 Choose to Begin Play at the Beginning of a Book

If the user knows that they want to hear a book from the beginning, they should move the cursor to the book they want to play and press the **PLAY/PAUSE** button twice to start. The starting point will be Chapter 1 :Verse 1 of the selected book (The NIV edition will begin with the book introduction.) From this point the device will play continuously forward to the end of the New Testament and return the user to the Main Menu unless the user pauses or stops play.

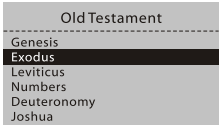

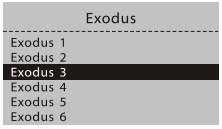

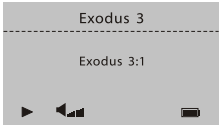

3.3.1.2 Choose to Begin Play at the Beginning of a Chapter

If the user knows they want to hear a particular chapter from its beginning, they should select the book by pressing the **MODE** button,thereby bringing them to a screen with the chapters of that book listed, then move the cursor to the chapter they want to play and press the **PLAY/PAUSE** button twice to start. From this point, the device will play continuously to the end of the New Testament and return the user to the Main Menu unless the user pauses or stops play.

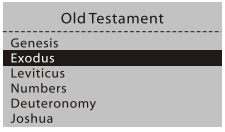

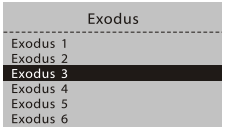

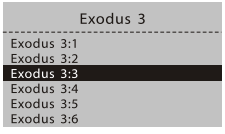

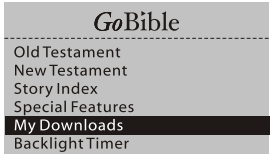

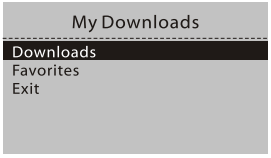

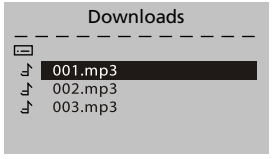

3.3.4.2 Favorites Set Up

From the Main Menu the user must select “My Downloads” by pressing the **MODE** button and then selecting “Downloads” by pressing the **MODE** button again. A list of the user’s current downloads will appear. Then move the cursor to the MP3 file which you intend to add to the Favorites, and press Bookmark button, after that a “Yes” or “No” choice menu will show up, move the cursor to “Yes” then press **MODE** button to add the MP3 file to Favorites.

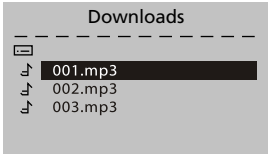

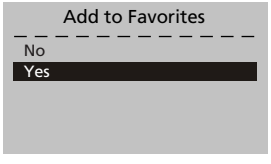

2.To add content to Windows Media Player, please click the Library tab on the top and scroll down and select “Add to Library.” Then choose the files from your computer to move to your library.
3.Connect a USB cable to your computer. Turn your Voyager unit on and connect the other end of the cable to your Voyager through the port on the top of the device. Windows Media Player will recognize the device on the right side of the screen and let you know how much free space is available.
4.Drag content from your library to the right, under where it says “sync list.”
5.Then click on the “Start Sync” button under the content list and the audio will begin to move to the Voyager.

To Delete Audio files from the Voyager:

1.Turn your Voyager unit on and connect it to your computer with Windows Media Player Running.
2.You will see a window open called “AutoPlay." Please open that window.
3.Select “Open Folder to View Files” from the list and this will bring up the files currently on the Voyager unit.
4.Right click on the file you wish to erase and click “delete.”

3.3.4.1 Play Downloads

The user may find their downloads by selecting "**My Downloads**" on the Main Menu screen, then select "**Downloads**" by highlighting it and pressing the **MODE** button. At this point a list of your downloads will appear on the screen. Select the music or other MP3 audio by using the **VOLUME- / Scroll Down** and **VOLUME+ /Scroll Up** buttons, then press the **PLAY/PAUSE** button to start. It will continue to play the next music on the list of your downloads when it is finished. While the music or other MP3 audio is playing, the user may return to the previous screen by pressing the **MODE** button, then the user can make another selection. The user may return to the main menu by pressing the **Mode** button for two seconds.

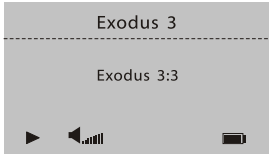

3.3.1.3 Choose to Begin Play at Any Verse

If the user knows exactly the verse they want to begin play with, they should repeat the steps in 3.3.1.1 and 3.3.1.2, except they should press the MODE button when they arrive at the Chapter list. Once selected, a list of verses within that chapter will come up on the screen and the user should highlight the verse they want to begin play with and press the **PLAY/PAUSE** button twice to start play. It will play continuously to the end of the New Testament and return the user to the Main Menu unless the user pauses or stops play.

3.3.1.4 Browsing while listening

This function is applicable only when Voice Menu function off. The user may browse the menus while listening to the audio. They should simply hold down the **MODE** button while the device is playing and the Main Menu will come to the screen. They may search and select from this point as they normally would. When they find a new place to begin listening, they should highlight the selection and press the **PLAY/PAUSE** button twice. If they decide not to change from what they were originally listening to, they should press the **BACK** button to return to the play screen that shows what they are currently listening to.

3.3.2 Story Index

The **GoBible® Voyager™** contains a Story Index of over two hundred of the most popular Bible stories easily indexed and accessible. Once the user has selected " Story Index" from the Main Menu

by highlighting it and pressing the **MODE** button, they will be given a choice of "Old Testament Stories" and "New Testament Stories." After a selection has been made, a list of those stories will appear on the screen. The stories are generally, but not exclusively, in chronological order as they appear in the Bible. To navigate more quickly through the lists, please press and hold down the **Volume + / Scroll Up** and **Volume - / Scroll Down** buttons. Once the user has arrived at the desired story, they should press the **PLAY/PAUSE** button twice to start. The stories have a beginning and end point. When the story is finished, the user will be returned to the Story Index list from where they made their selection.

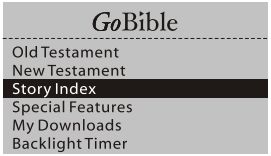

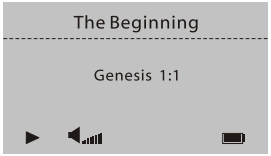

3.3.3 Special Features

3.3.3.1 Topic Index

The GoBible Voyager contains a Topic Index which contains passages that are relevant to specific emotions, feelings and circumstances. From of the Main Menu, the user must select "Special Features" by highlighting it and pressing the **MODE** button, and on the next screen they should highlight "Topic Index" and press the **MODE** button. At

3.3.3.4.3 Deleting a Bookmark

After entering the Bookmark menu, select the desired bookmark to delete, and press and release **Button Lock / Bookmark** button

3.3.3.5 Voice menu

The **GoBible® Voyager™** is equipped with a voice menu which may be turned on and off. The default setting is on. To change the setting go to Special Features off the main menu and press the MODE button and then highlight Voice Menu and press the MODE button. You will see the current status highlighted. To change, simply highlight the other status and press the MODE button. You will be taken to the Special Features page after your selection is made. If you want to back out of the page and not change the selection, press the BACK button.

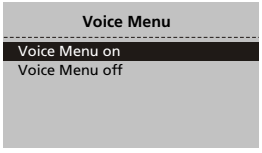

For a voice instruction guide for blind users, please visit www.gobible.com.

3.3.4 User Downloads

There are 3GB for personal downloads. The user may connect the device to a PC via the accessory USB cable, and load music or other MP3 audio from a PC to the device by moving the audio to the Voyager on your PC's media player when the Voyager is hooked up to the computer via USB connection.

Voyager Downloading Instructions

To Download audio to the Voyager:

1. Make sure your computer has Windows Media Player loaded on it. If it does not, it may be downloaded for free from Microsoft at www.microsoft.com under the Windows tab on the top.

be displayed on the screen. This indicates that the verse has been successfully bookmarked.

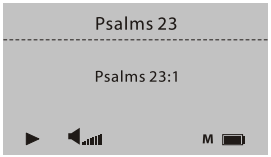

3.3.3.4.2 Play Bookmark

From the Main Menu the user must select "Special Features" by pressing the **MODE** button and then select "Bookmarks" by pressing the **MODE** button again. A list of the user's current bookmarks will appear.

Note: The **GoBible® Voyager™** can support 36 bookmarks. To listen, the user should move the cursor to the bookmark they want to play and press the **PLAY/PAUSE** button twice. The device will begin play from that verse and it will play continuously to the end of the New Testament and return the user to the Main Menu unless the user pauses or stops play.

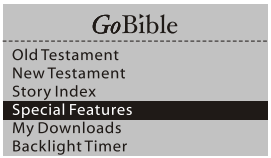

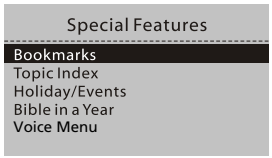

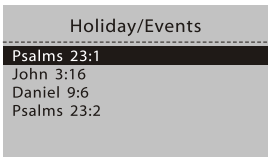

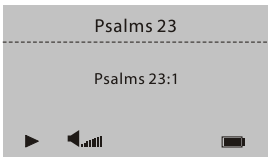

this point a list of topics will appear on the screen. The user should select a desired topic, press the **MODE** button and a list of passages will appear. Select a passage using the Volume +/ Scroll Up and Volume -/ Scroll Down buttons, then press the PLAY/PAUSE button twice and the device will play that passage and return you to the passage list when it is finished. The user then may scroll up or down to another passage on that topic or exit out of that topic by pressing the **BACK** button.

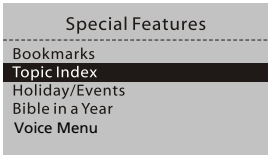

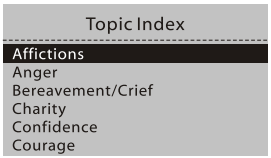

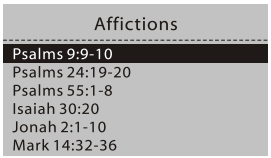

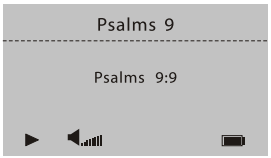

3.3.3.2 Holiday / Events

The GoBible Voyager contains a Holiday/ Events Index that helps the user to find passages that are relevant to special days. From the main menu, the user must select "Special Features" by highlighting it and pressing the MODE button, then select Holiday/Events and press the **MODE** button. At this point a list of holidays and events will appear on the screen. Select the occasion and press the **MODE** button. A list of

passages and/or stories will appear on screen. Select the passage using the Volume-/Scroll Up and Volume +/Scroll Down buttons, then press the **PLAY/PAUSE** button twice to start. The user will be returned to the passage list when it is finished. The user then may make another selection or exit out of that by pressing the **Back** button.

3.3.3.3 Bible In A Year

The **Go Bible® Voyager™** is equipped with a special "Bible in a Year" feature that allows the user to listen to the entire Bible in 365 days. The program calls for approximately 12-15 minutes of listening every day. From the Main Menu, the user must select "Special Features" by highlighting that selection and pressing the **MODE** button, they must then select "Bible in a Year" by again highlighting that choice and pressing the **MODE** button. They will be taken to a list of 52 weeks and then after a week has been highlighted, the user should press the **MODE** button and a list of 7 days will appear on the screen.

Once the days have been selected by highlighting it and pressing the **MODE** button, several chapters/ selections will appear on the screen. The user should highlight the first selection and press the **PLAY/PAUSE** button twice to start. When that selection has completed play, the device will return to that day's selection list, so the user should scroll down to the next selection and press the **PLAY/PAUSE** button twice to hear that selection and so forth.

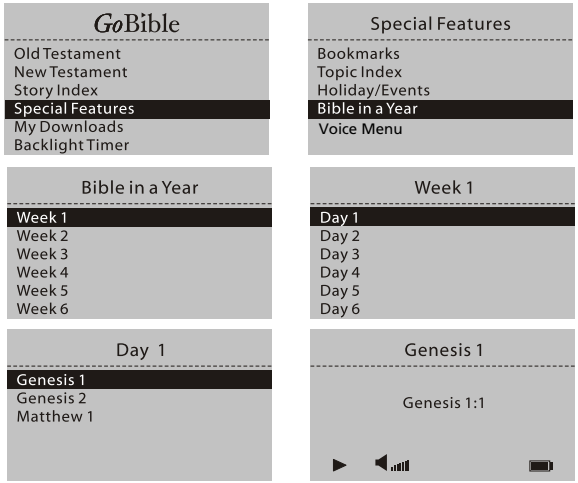

3.3.3.4 Bookmarks

3.3.3.4.1 Bookmarks Set Up

In order to bookmark a verse, press and release the **Button Lock / Bookmark** button anytime the device is playing. The letter "**M**" will